



Speedy Concrete Repair

"Rescuing concrete, one slab at a time."

Speedy Concrete Repair, LLC

Phone: 770-904-9065

Toll Free: 877-891-1865

Email: info@speedyconcretereprair.com

SCR-FZ88C

Follow repair area prepping instructions before beginning to install material.

Safety glasses/goggles, gloves and dust mask recommended before installing joint material.

Assembly and Installation for SCR-FZ88C

For Freezer Use Only

SHAKE CARTRIDGE WELL BEFORE USING

Prepping – Ensure the material application area is free of all debris, old material and is dry to the touch. Excessive moisture or frost in the joint will create foaming and reduce physical properties of the system. SCR-FZ88 will change color if exposed to UV light sources.

Assembly – Remove nut from top of cartridge. Pull out plug and place static mixer on top of cartridge securely. Slide nut back down over static mixer and screw down to tighten firmly. Place in 2 component 300ml x 300ml applicator.

Installation – Using a dustless concrete saw, diamond blade, saw joint vertically at 90° angle to minimum depth of one inch. Take assembled cartridge, point straight up and purge air until material reaches the top of the static mixer. Point straight down into a disposal container and squeeze applicator handle a few times to purge a small amount. Place static mixer into joint and begin squeezing handle to apply. Keep a steady flow and do not stop movement. Overflow a small amount of material in the joint. Shave flush to the floor in 30 minutes.

www.speedyconcretereprair.com